



RR150 Horizontal Log Splitter Owner's Manual





Remove the steel frame and unpack all the individual parts.



Lift the machine out of the frame.





To unpack all the parts, unfold this rack.



Remove these screws from the axle.





Remove the cotter pin, nut, washer, and hub on one side of the axle.



Insert the axle into the machine frame and install the two screws and the hub.





Install the hubcaps.



Install the wheels and fenders. Torque the wheel nuts to 75 foot-pounds.






Install the draw bar.




Install the two stands.

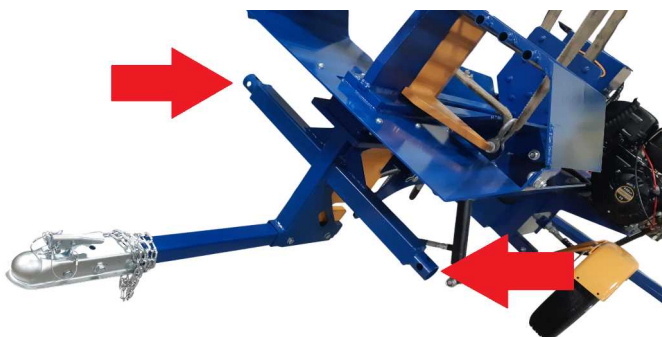



Remove these bolts.

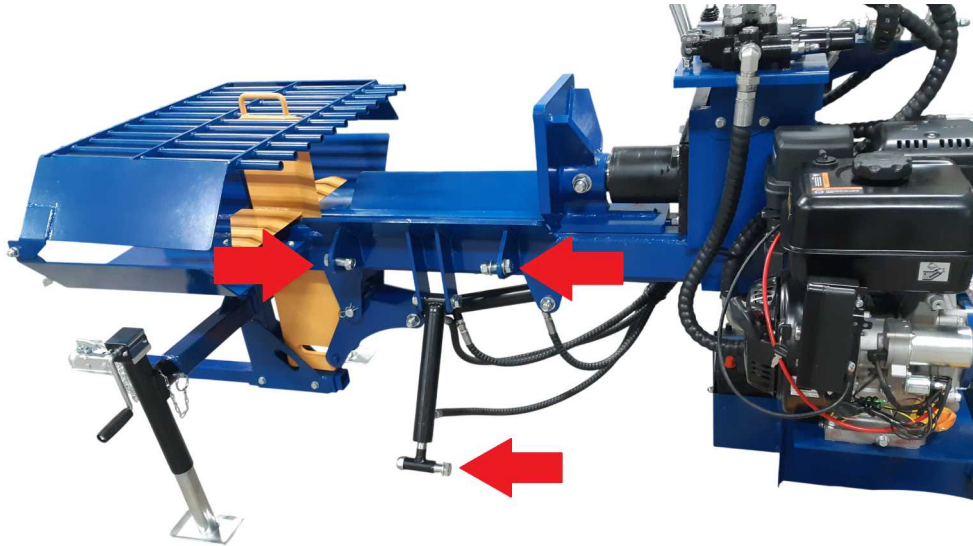

Install the loading table. Connect the cylinder to the table and install the bolt. The frame has provisions to install the loading table on either side of the machine.





Find the wrapped end of that cable and connect it to the battery.





Fill with hydraulic tank with roughly 90 litres of AW-32 hydraulic oil and motor oil(conventional 5W-30). Fill the tank with gas.