

Adding THE RR2501 Infeed to a RR102 Log Table or RR105 Log Lifter

Remove the Quick Connect fitting and Seal and replace with the provided Adaptor and seal



Install the provided Hydraulic hose from the new installed adaptor on the valve to the existing hydraulic feed motor as shown



On the existing hydraulic feed motor. Replace the fitting with the provided adaptor and install the quick connect adaptor.



Attach all the quick connections.

Start and run the processor and check for leaks. Fully operate the Log Lifter in both directions to work the air out of the system. Fill the processor back up with the same Hydraulic Fluid currently being used.