

Range Road RR440 Wood Chipper


Assembly Instructions

1. Remove the top and sides of the wooden crate.
2. Secure the unit using wooden blocks and install the tongue crossmember. Exercise caution when propping, as a second person may be necessary for safety.

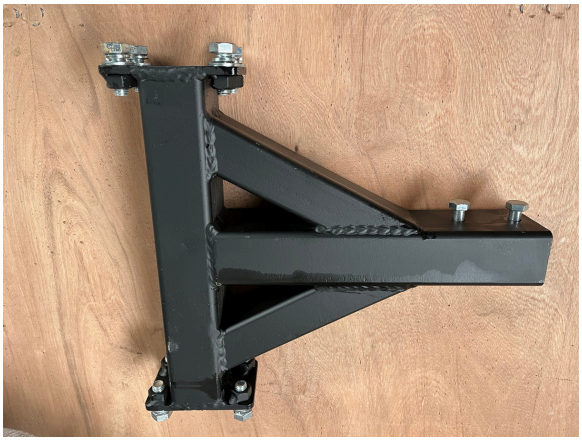


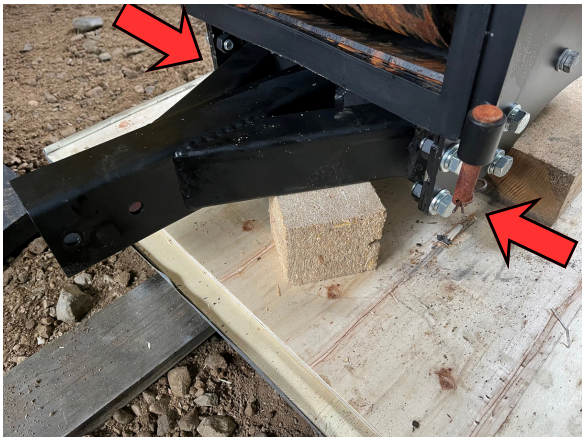

3. Install the axle using the hardware provided in the manual packet, ensuring that the hubs are positioned on the underside of the axle.

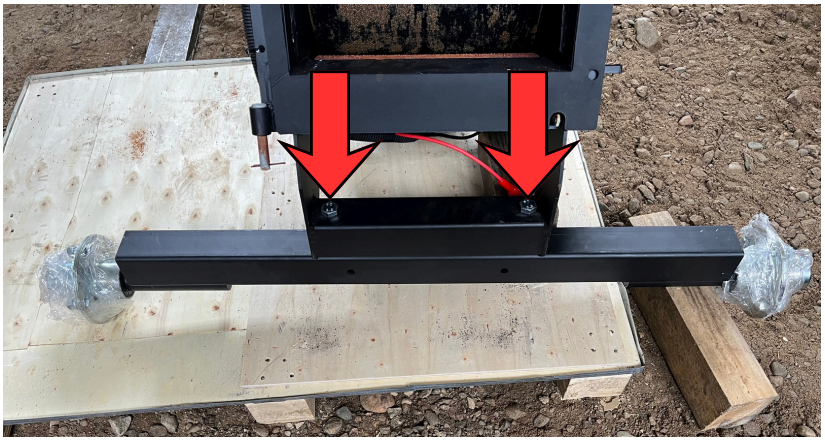

4. Attach the tongue using bolts.

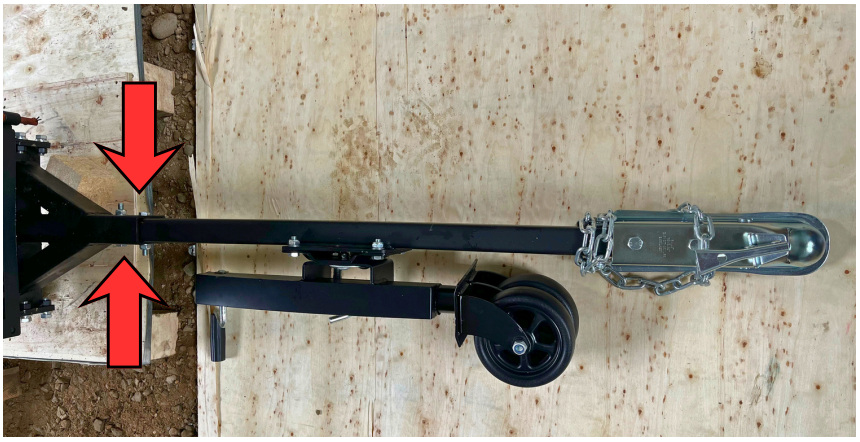


5. Install the wheels.



6. Install the front output chute by removing and then reinstalling the pins.



7. Adjust the latches as needed to ensure proper engagement of the safety kill switch.

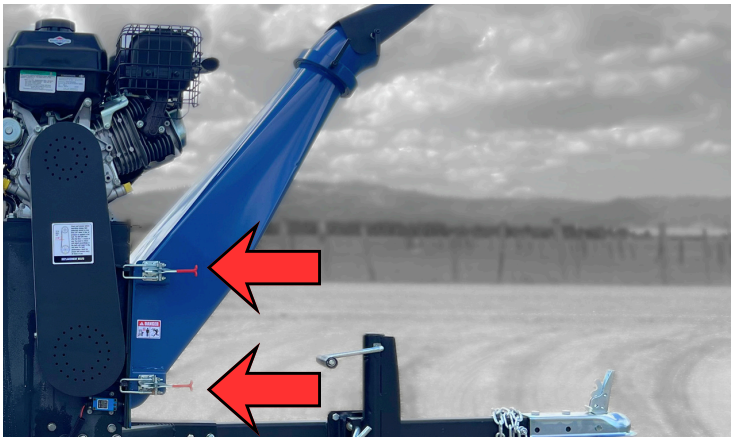

8. Install the directional top for the output chute. Loosen the set screw, position the top, and then tighten the set screw.




9. Install the battery box and connect the battery cables.



10. Attach the feed chute by removing and then reinstalling the pins.



11. Adjust the latches as needed to ensure proper engagement of the safety kill switch.

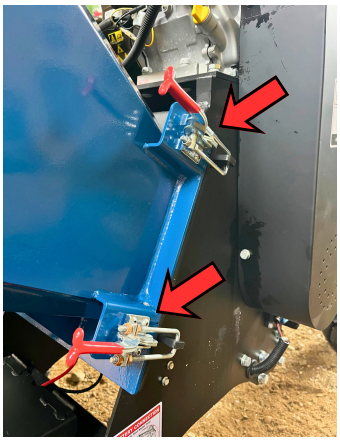

12. Securely connect the wires for the safety kill switches.



13. Add oil and gasoline to the engine, and grease all fittings as required.

