RR 442 Wood Chipper

Owner's Manual




Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

It’s a good idea during assembly to take a look at the main cutting blades and check tension on the mounting bolts.

Open the crate and remove all loose parts inside. Lift the machine out of the crate.



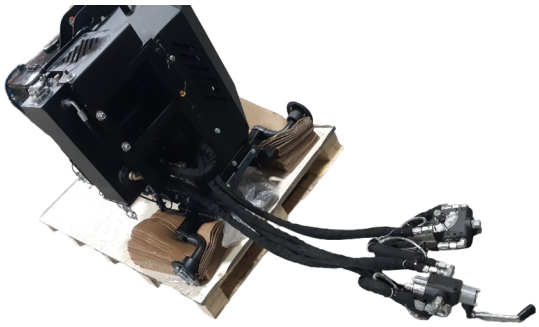



Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the tow bar.







Install the fenders.







Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the wheels.





Install the bumper with the lights. Make sure the hydraulic hoses run over the top of the bumper.









Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

At the end of the machine is a cable with a plug to which the bumper cables are connected.



If the machine was shipped with a European plug, you must install the North American plug.






Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the battery and connect it.




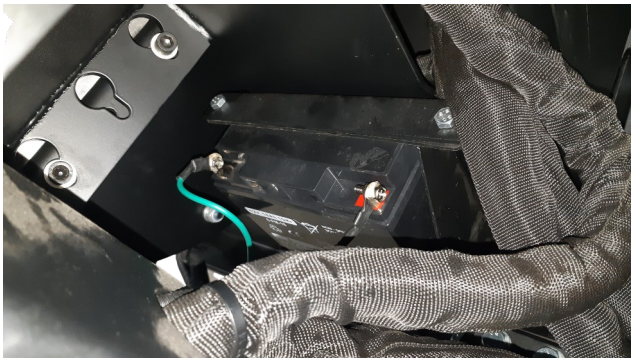

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the chute.



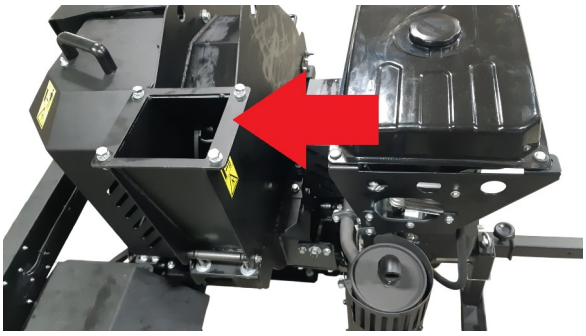



Install the infeed.





Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Connect the cables for the emergency stop switch on the infeed.



Install the trigger valve and the flow valve under the infeed.



Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca





Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Ensure wheels are torqued and that the tire pressure matches the manufacturer's recommended pressure indicated on the tire.

Add engine oil to engine until reading full on the dipstick – if the engine is equipped with an oil filter, be sure to crank the engine over(without starting) about 5-10 times to ensure the oil filter is filled and you get an accurate reading on the dipstick.

Add fuel to the engine.

Add hydraulic oil to the tank until oil shows up on the dipstick – once the unit is test ran, re-check hyd. fluid level.

Run the machine at low idle speed to ensure there are no leaks.

Test all functions at low engine speed before the unit is put to work.

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca