



RR170 Fire Wood Bundler Owner's Manual






Unpack everything and remove the plastic wrap.



Place the upper frame on the floor to install the legs. Shaft with sprocket down.

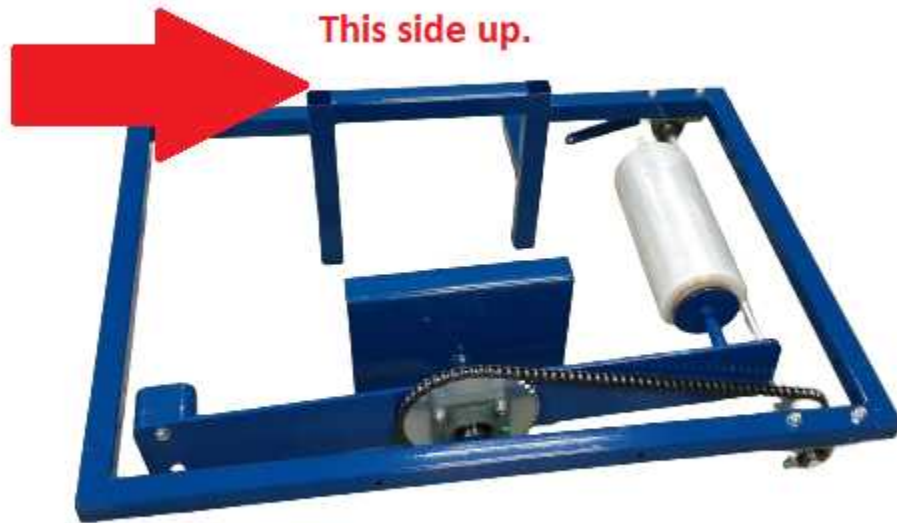

Remove these bolts from the 4 legs.





Remove these bolts.



Install all 4 legs as shown in the photo. Nuts to the inside. Leave all bolts loose.






Install the floor frame. Install all bolts on that frame and tighten them.



Tighten these bolts.

Leave these loose.

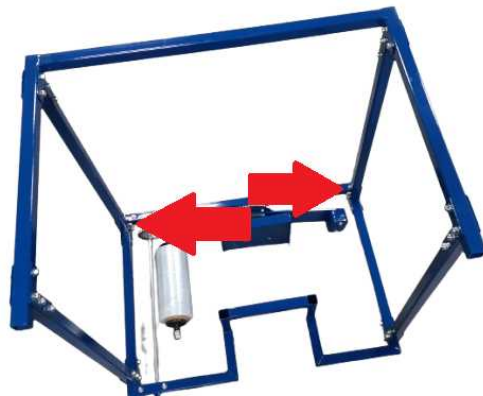




Turn the whole device over.



Remove these 6 bolts.

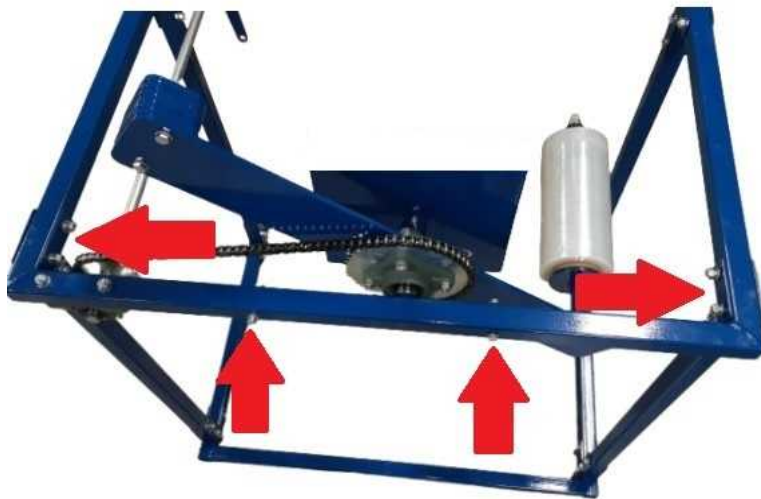



Fit the guard and all 6 screws. For 1 of them, the nut must be on the outside so that the bolt does not hit the counterweight.



Install the handle of the crank.



Make sure all bolts are tight.