RR 640 Ski Trailer
Owner's Manual



Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Unpack everything and unwrap everything.












Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

These pipes must be removed. They are intended for transport only.

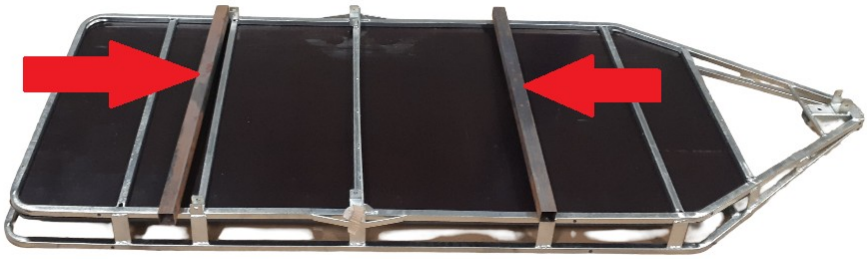


Now let's install a control arm and shock absorber with the corresponding bushings.







Insert the bushings into the control arm. Attach both to the frame. The shock absorber must be placed to the rear.

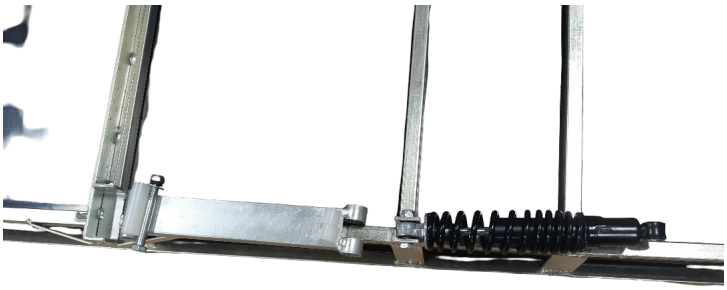

Connect the shock absorber to the control arm.




Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

This is how it should look.



Place a ski on top of it, with the curved part facing forward. Then install the last of the three screws. Do that for both sides.




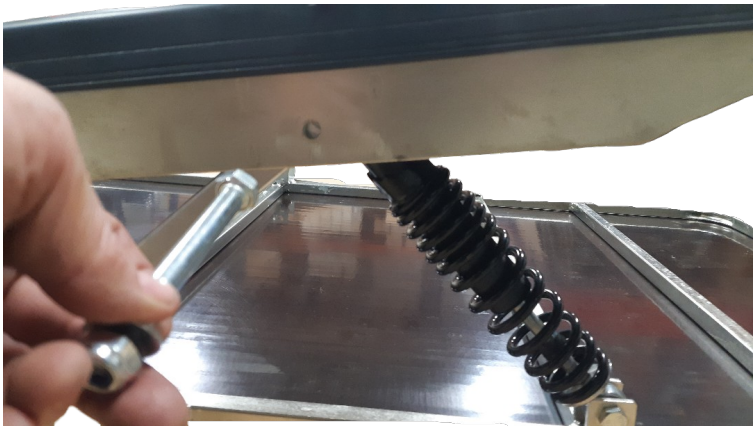

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Now we need these 5 parts. Frame, pull rod, spring, washer, and cotter pin. Assemble these as shown in this picture.




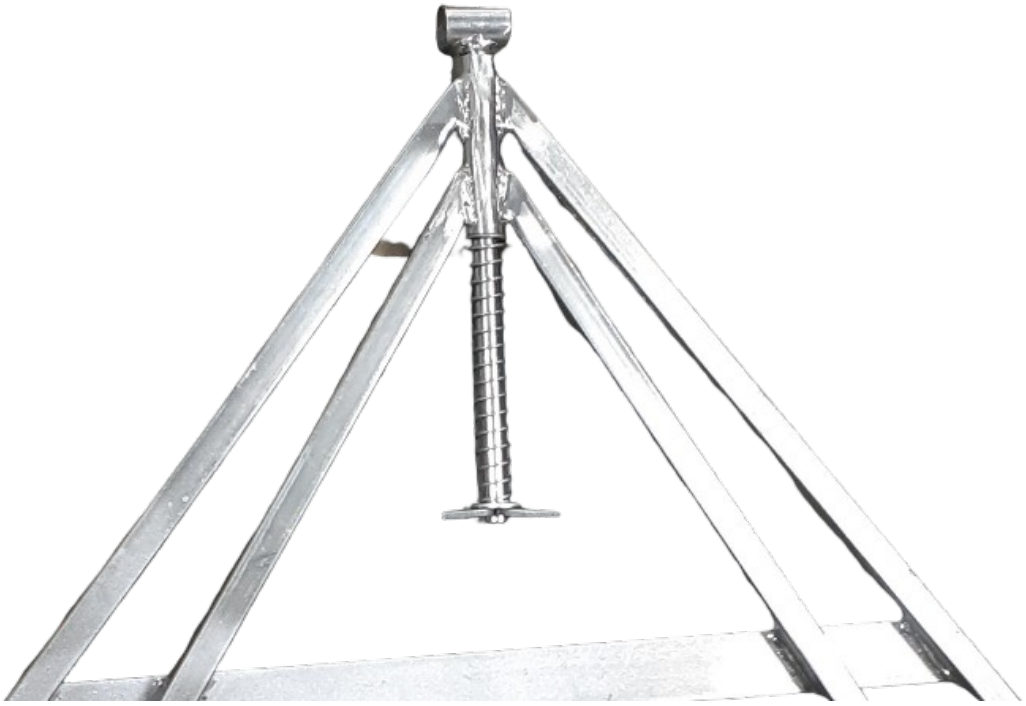

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Insert the bushing into the hinge, and attach the hinge to the ski.



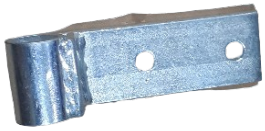


The hinge is attached to the front of the ski .





Do that for both sides.

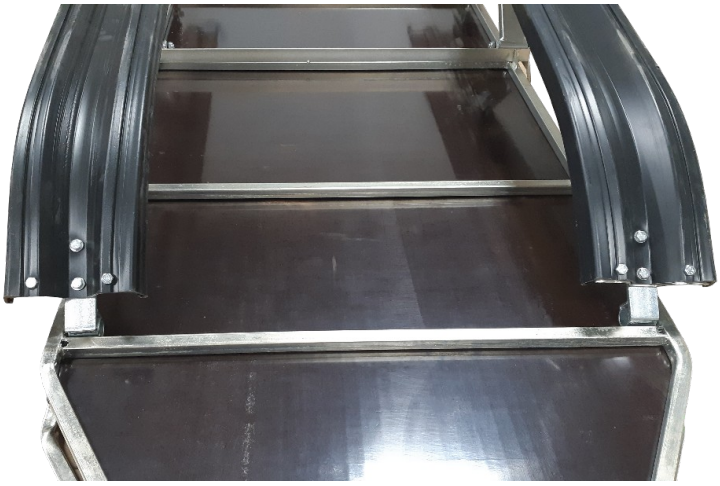


Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the bushing in the tie rod on the frame.



Attach this frame to the hinges on the ski’s.




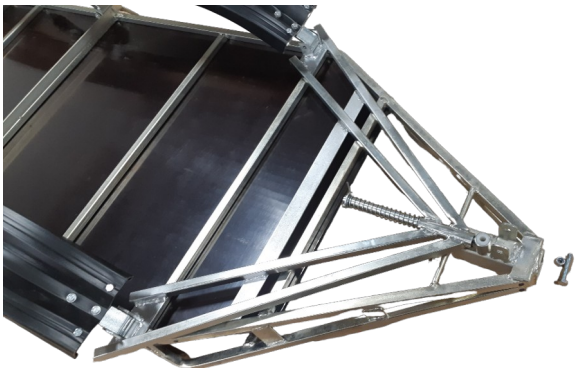




Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Attach the tie rod to the sled frame.

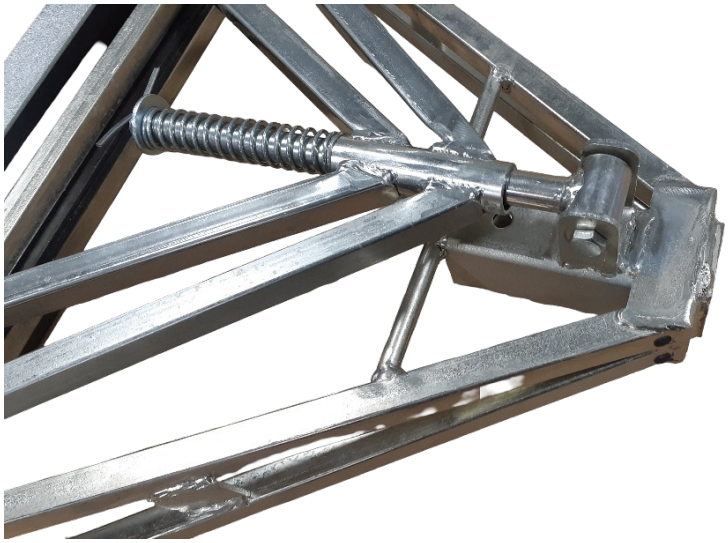




Install this part to the frame.

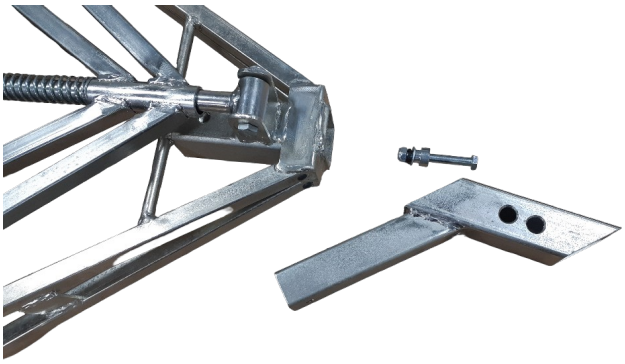





Don't forget this bolt.

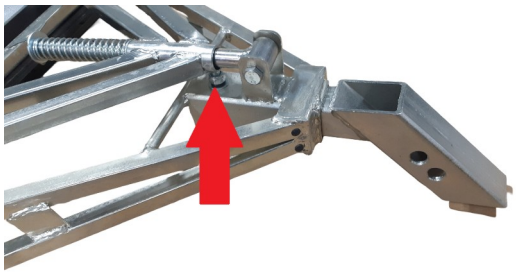


Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Turn the sled around so that it's standing on its ski’s. Now this part. One side of the holes is larger to fit the metal bushing. Insert this bushing along with the bolt.

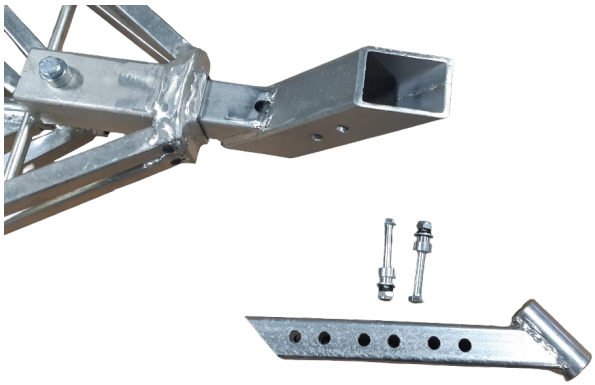


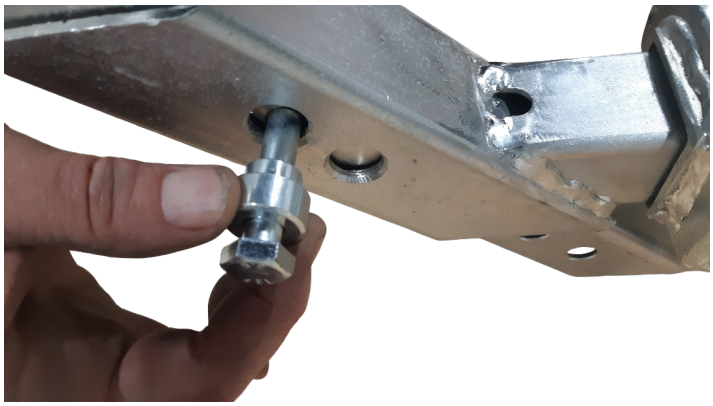

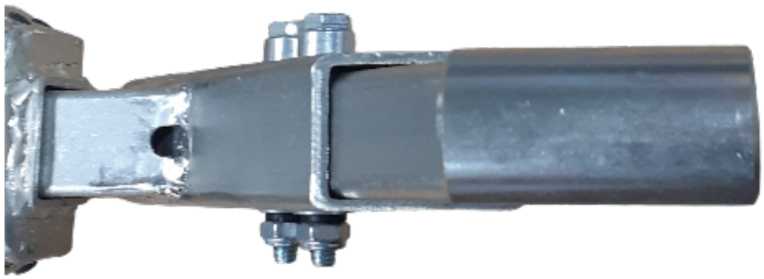

This part is installed last.



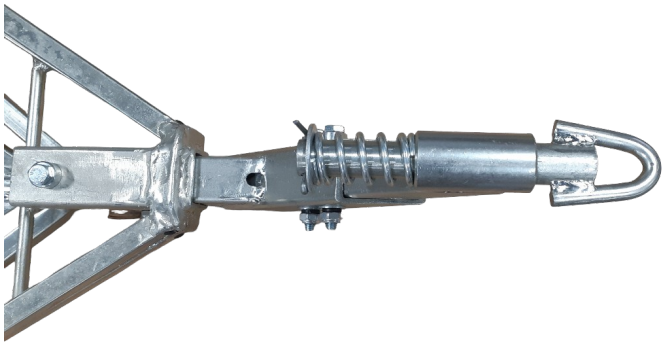

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

This is how it should look now.



Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca