Range Road RRF820 Potato Digger Harvester

Assembly Instructions

1. Remove all screws from the crate.
2. Lift off the top of the crate.



3. Remove all wire banding and set the parts aside.




4. Remove the bolts and reinstall the 3-point bracket. Do not tighten the bolt at this time—finger-tight only.




5. Loosen the nuts for the 3-point hitch and remove it.



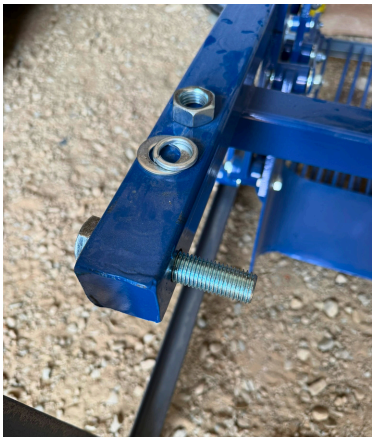

6. Disassemble the 3-point hitch.

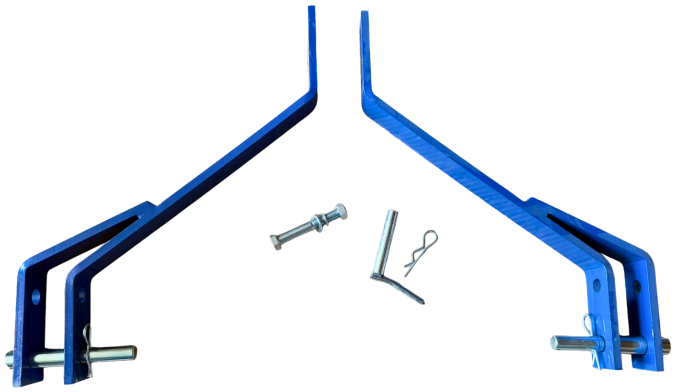


7. Insert the bolt through one half of the hitch and finger-tighten.



8. Install the other half of the hitch.



9. Install the middle bolt of the hitch.

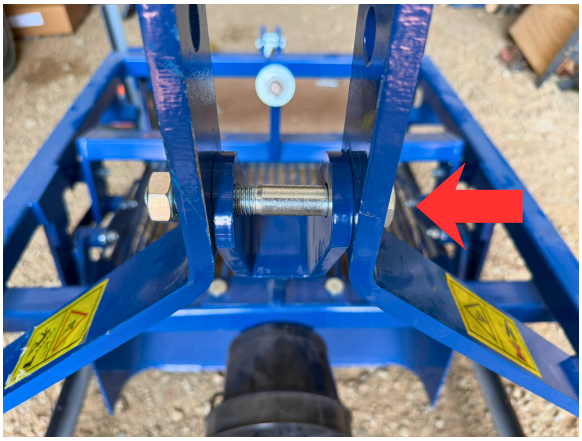

10. Go back and tighten all previously installed bolts.

11. Loosen and remove the nut.



12. Attach the turnbuckle, then reinstall the washers and nut.



13. Lift the unit out of the bottom of the crate. While it is in the air, loosen the wheel axle bolts, slide in the wheel assembly on each side, and retighten the bolts.



14. Install the PTO shaft. You are ready to harvest some potatoes!

