


Install the Valve assembly on the Firewood processor using the two provided screws and washers.

Reroute the Pressure Line from the Pump to the installed Valve on the "T" (Tank) Port as shown.

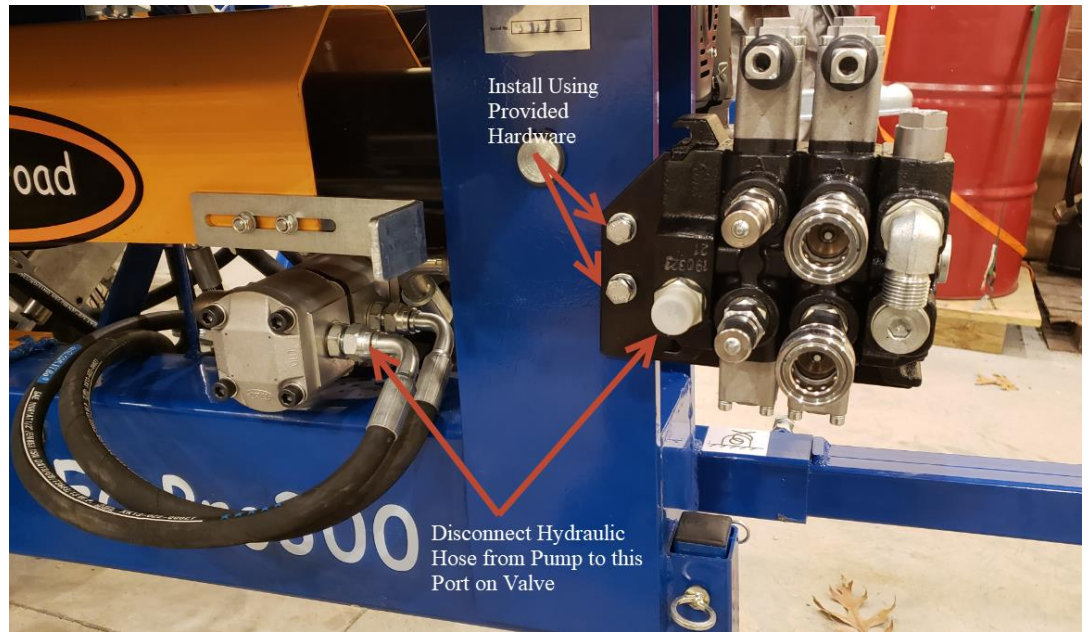

Install the Supplied Hose From the Pump to the "P" (Pressure) Port as shown.

The image to the right is showing the proper connections in place.

